

User manual
Washing machine

HWX8040DW1

Haier

Thank you for purchasing a Haier Product.

Please read these instructions carefully before using this appliance. The instructions contain important information which will help you get the best out of the appliance and ensure safe and proper installation, use and maintenance.

Keep this manual in a convenient place so you can always refer to it for the safe and proper use of the appliance.

If you sell the appliance, give it away, or leave it behind when you move house, make sure you also pass this manual so that the new owner can become familiar with the appliance and safety warnings.



Legend

Warning – Important Safety information



General information and tips



Environmental information



Disposal

Help protect the environment and human health. Put the packaging in applicable containers to recycle it. Help to recycle waste of electrical and electronic appliances. Do not dispose appliances marked with this symbol with the household waste. Return the product to your local recycling facility or contact your municipal office.



WARNING!

Risk of injury or suffocation!

Disconnect the appliance from the mains supply. Cut off the mains cable and dispose of it. Remove the door catch to prevent children and pets to get closed in the appliance.

Safety information	4
Product description	7
Control panel.....	9
Programmes.....	13
Consumption	15
Daily use	16
Care and cleaning	25
Troubleshooting.....	28
Installation.....	32
Technical data.....	35
Customer service.....	36

Safety information

Before switching on the appliance for the first time read the following safety hints!:



WARNING!

Before first use

- ▶ Make sure there is no transport damage.
- ▶ Make sure all transport bolts are removed.
- ▶ Remove all packaging and keep out of children's reach.
- ▶ Handle the appliance always with at least two persons because it is heavy.

Daily use

- ▶ This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- ▶ Keep away children under 3 years of age from the appliance unless they are constantly supervised.
- ▶ Children shall not play with the appliance.
- ▶ Do not let children or pets come close to the appliance when the door is open.
- ▶ Store washing agents out of reach of children.
- ▶ Pull up zips, fix loose threads and take care for small items to prevent laundry from being entangled. If necessary, use an appropriate bag or net.
- ▶ Do not touch or use the appliance when barefoot or with wet or damp hands or feet.
- ▶ Do not cover or encase the appliance during operation or afterwards to allow any moisture or dampness to evaporate.
- ▶ Do not place heavy objects or sources of heat or damp on top of the appliance.
- ▶ Do not use or store flammable detergent or dry cleaning agent in close vicinity to the appliance.
- ▶ Do not use any flammable sprays in close vicinity to the appliance.

Safety information



WARNING!

Daily use

- ▶ Do not wash any garments treated with solvents in the appliance without having dried them previously in the air.
- ▶ Do not remove or insert the plug in the presence of flammable gas.
- ▶ Do not hot wash foam rubber or sponge-like materials.
- ▶ Do not wash any laundry which is polluted with flour.
- ▶ Do not open detergent drawer during any wash cycle.
- ▶ Do not touch the door during the washing process, it gets hot.
- ▶ Do not open the door if the water level is visibly over the porthole.
- ▶ Do not force the door to open. The door is fitted with a self-lock device and will open shortly after the washing procedure is ended.
- ▶ Do not open the water outlet filter or emergency door ring during washing programmes.
- ▶ Do not touch the inner drum, metal parts, door, control panel or metal buttons on the clothing shortly after washing programme at high temperature or the water outlet hose when draining out hot water.
- ▶ Switch off the appliance after each wash programme and before undertaking any routine maintenance and disconnect the appliance from the electrical supply to save electricity and for safety.
- ▶ Hold the plug, not the cable, when unplugging the appliance.

Maintenance / cleaning

- ▶ Make sure children are supervised if they carry out cleaning and maintenance.
- ▶ Disconnect the appliance from the electrical supply before undertaking any routine maintenance.
- ▶ Keep the lower part of the porthole clean and open door and detergent drawer if appliance is not in use to prevent odours.
- ▶ Do not use water spray or steam to clean the appliance.
- ▶ Replace a damaged supply cord only by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- ▶ Do not try to repair the appliance by yourself. In case of repair please contact our customer service.

Safety information



WARNING!

Installation

- ▶ The appliance should be placed in a well-ventilated place. Ensure a location which allows opening the door fully.
- ▶ Never install the appliance outdoors in a damp place, or in an area which may be prone to water leaks such as under or near a sink unit. In the event of a water leak cut power supply and allow the machine to dry naturally.
- ▶ Install or use the appliance only where the temperature is above 5 °C.
- ▶ Do not place the appliance directly on a carpet, or close to a wall or furniture.
- ▶ Do not install the appliance in direct sunlight or in the near of heat sources(e.g. stoves, heaters).
- ▶ Make sure that the electrical information on the rating plate agrees with the power supply. If it does not, contact an electrician.
- ▶ Do not use multi-plug adapters and extension cables.
- ▶ Make sure only the delivered electric cable and hose set are used.
- ▶ Make sure not to damage the electric cable and the plug. If damaged have it replaced by an electrician.
- ▶ Use a separate earthed socket for the power supply which is easy accessible after installation. The appliance must be earthed.
- ▶ Make sure the hose joints and connections are firm and there is no leakage.

Product description


Intended use

This appliance is intended for machine-washable laundry only. Follow the instructions given on the label of each garment label at anytime. It is designed exclusively for indoor domestic use. It is not intended for commercial or industrial use.

Changes or modifications to the device are not allowed. Unintended use may cause hazards and loss of all warranty and liability claims.

Due to technical changes and different models, the illustrations in this chapter may differ from your model.

Appliance components (front)

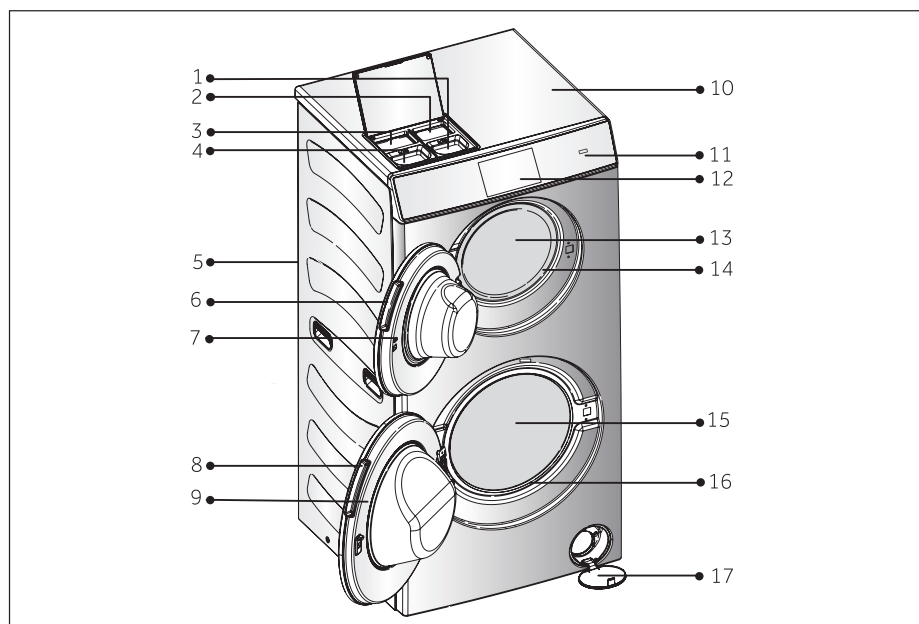


- 1 Detergent drawer for upper drum
- 2 Softener drawer for upper drum
- 3 Softener drawer for lower drum
- 4 Detergent drawer for lower drum
- 5 Side panel
- 6 Upper door handle
- 7 Upper door
- 8 Lower door handle
- 9 Lower door

- 10 Worktop
- 11 Power button
- 12 Touch screen display
- 13 Upper drum
- 14 Upper sealing
- 15 Lower drum
- 16 Lower sealing
- 17 Service flap with filter A

Product description

Appliance components (back)

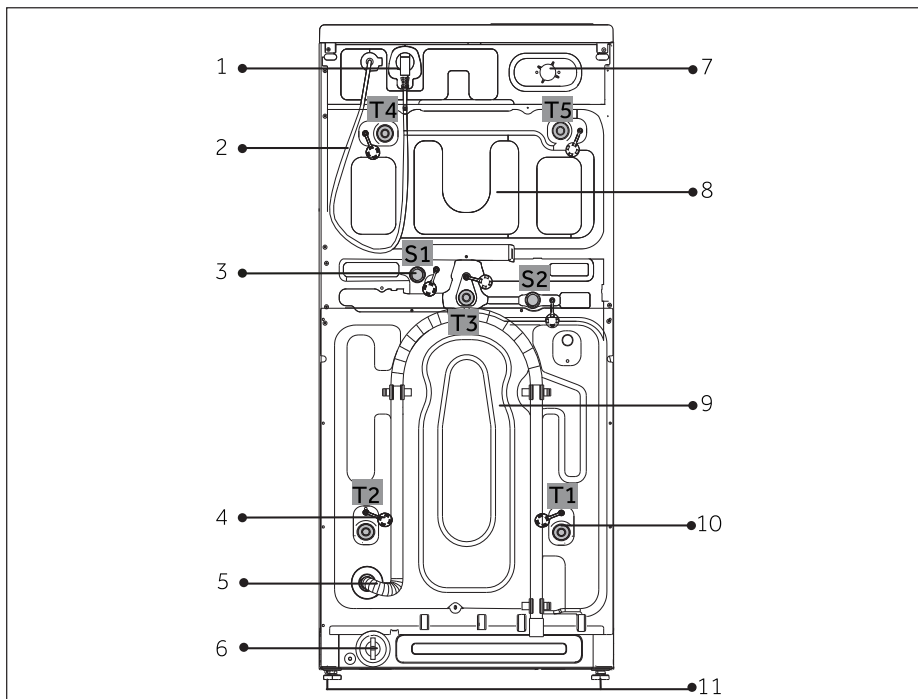

- | | |
|--------------------------------|--------------------------------|
| 1 Power cord plug | 7 Water inlet connection point |
| 2 Power cord | 8 Upper rear cover |
| 3 Transportation bolts (S1-S2) | 9 Lower rear cover |
| 4 Blanking plugs (7 in all) | 10 Packaging screws (T1-T5) |
| 5 Water outlet | 11 Adjustable feet (4 in all) |
| 6 Filter B | |

Accessories

Check the accessories and literature in accordance with this list:



hose



Drain hose bracket



Spanner




Warranty-card



User manual

Control panel

This appliance is operated through a full touch screen display (fig.1). It's clearly shown on the touch screen, how to choose between upper and lower drums, programmes and settings. The user get access to all functions with one slight touch.

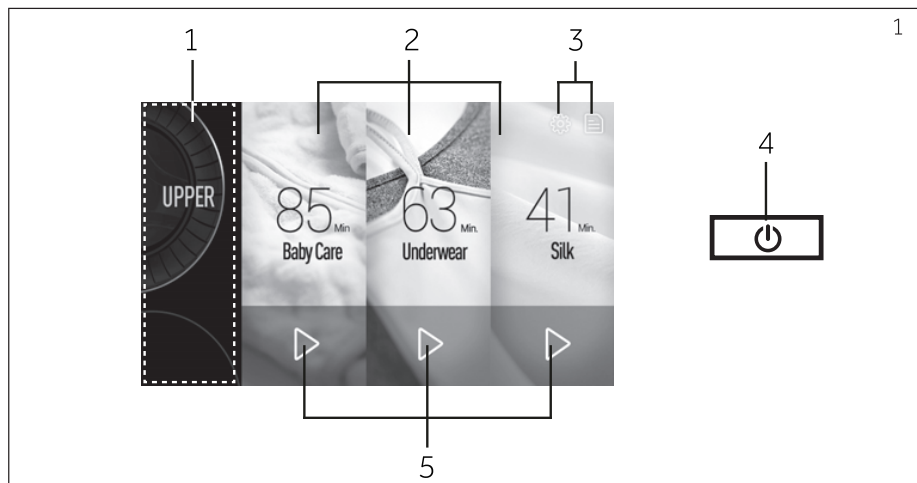

1 Drum selector

2 Programme selector

3 Submenu

4 Power button

5 Quick-Start button

1-Drum selector

Touch or slide up and down in this area to switch between the drums.

2-Programme selector

The screen will display all available programmes once the drum has been selected. There are 12 different programmes for the upper drum and 18 programmes for the lower drum. In addition the Combo program is existing for simultaneous use of both drums.

Slide sideways on the screen will show you the next available program. Once selected, the programme will light up on full screen and its default settings will be displayed.



Note:


► The default settings of each programme can be found on the display.

Control panel

3-Submenu


Touch the symbols to get following information or further settings:

Symbol	Meaning
	Open operation videos.
	Setting mode for child lock function, sound, brightness.
	Return to last level menu.

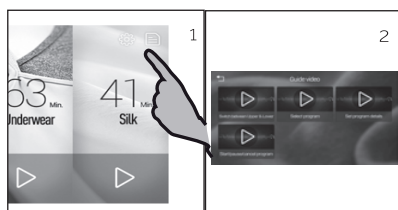

Operation guide

Touch  on right edge of display (fig.1) to enter page for videos (fig.2). Here brief and clear information guide can be found to use the appliance better and more safely.

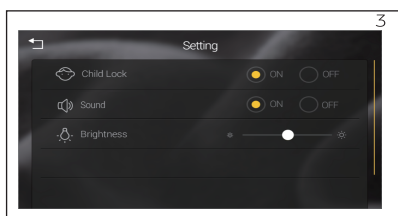

System settings

1. Touch  on right edge of display (fig.1) to enter settings.
2. Child lock, sound and brightness can set separately (fig.3).

4-Power button

Touch this button for 3 seconds to switch on the appliance, the display is shining. Touch it again for about 3 seconds to switch off. If no programme is activated after a while machine will shut down automatically.


5-Quick-Start button

Touch this button gently to get a rapid start with using default settings.

Control panel

Programme status indicators

During programme run display will light up the actual status on different sections. The information include the remaining operation time, washing process indicator, programme progress indicator (fig.1):

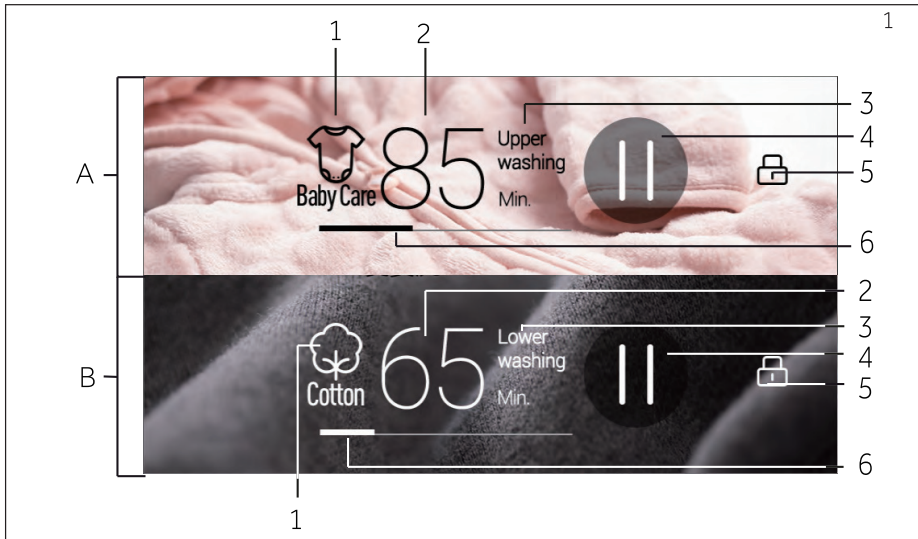

A Upper drum

B Lower drum

1 Selected programme

2 Remaining operation time

3 Washing process indicator

4 Start/Pause button

5 Door is locked


6 Programme progress indicator

Special functions

Child Lock

This function blocks all panel elements against activation.


- ▶ Turn on the function in "Setting"-menu (fig.2).
- ▶ After starting a programme panel lock symbol will be displayed after 1 minute (fig.3).
- ▶ When child lock is in operation, press its symbol on the screen for 3 seconds to stop this function.

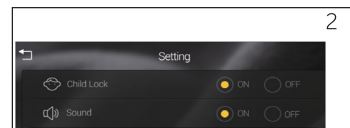

Control panel

Door lock

For safety reasons the washing machine door is normally locked during the washing circles. The door lock signal will be shown on the screen; when both drums are under operation then both signals will be shown (fig.1).

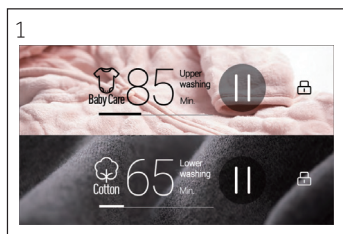

- ▶ To unlock the door during the washing circles touch the pause signal on the screen and open the door after the signal fades out.
- ▶ Under some conditions, e.g. when the water level or temperature in the drum is too high or the drum is still rolling, the door might not be opened even the programme is paused. Please note this is a normal situation.
- ▶ You also need to unlock the door to open it during the "delay" period.

Drum lamp

After switching on the appliance, during programme pause or washing circle finish period the drum lamp will light up.



Note: Standby mode / energy-saving mode

The switched on washing machine will go into standby-mode if it will not be activated within 2 minutes before starting the programme or at the end of programme. The display turns grey. To interrupt the standby-mode touch the display at any position. If the display is grey for two minutes, the appliance will automatically power off after 10 minutes.

Programmes

Following programmes are available for the upper and lower drum:

Presorted laundry	Fabric care symbol	Programme	Fibre type
Intensive white laundry heavily soiled or with special hygienic requirements		Allergy Care	Baby clothes
		Sanitary	Cotton and linen clothing
Insensitive white laundry Insensitive colored laundry	 	Combo	Cotton and linen clothing
		Baby care	1-3 baby clothes
		Kids' Wear	Children's clothing
		Cotton ¹⁾	Cotton and linen
		Underwear	Underwear
		Bedding	Bedclothes
		Towels	Towels and bath towels
		Daily Wash ²⁾	Small size clothes
		Bulky	Heavily soiled cotton laundry
		Mix	Mixed fiber
		Jeans	Jeans
		Shirts	Shirts
Sensitive white and colored laundry	 	Down	Down & feather filled laundry
		Synthetic	Synthetic
		Curtain	Curtain & co.
		Outdoor Care	Outdoor clothes
		Silk	Washable silk
		Sports Wear	Sportswear
		Wool	Woolen clothing
		Color Wear	Dark colored laundry
		Quick Wash ³⁾	Lightly soiled laundry of cotton or synthetic
		Delicates	Handwashing or delicate laundry
All kinds of laundry		Rinse & Spin	Rinsing without detergent
		Spin	Spinning only
Without any laundry		Tub Clean	Self-cleaning of drum with specific detergent

¹⁾ The Cotton for the Energy Labelling according to AS/NZS 2040.2:2005.

²⁾ The Daily Wash for the Energy Labelling according to AS/NZS 2040.2:2005.
Don't forget to load drums!

³⁾ The time count down shown on screen doesn't include the clothing distribution time while spinning; do not overdose detergent avoid too much foam.

Programmes

Programme	Drum U: Upper L: Lower	Max. load in kg	Presetting				
			Programme runtime in min ¹⁾	„Wash“ in min	„Rinse“ cycles	Tempe- rature in °C	Preset „Speed“ in rpm
Allergy Care	U	2	131	30	2	90	1000
Sanitary	L	4	161	30	2	90	1000
Combo	U+L	4+8	233/216	/	/	30	1000
Baby Care	U	3	85	10	3	40	1000
Kids' Wear	U	3	90	15	3	40	1000
Cotton	L	8	65	10	2	30	1000
Underwear	U	2	63	10	2	40	1000
Bedding	L	5	97	15	3	40	1000
Towels	U	2	46	5	2	30	800
Daily Wash	U	4	51	10	2	30	1000
Bulky	L	5	92	20	3	30	1000
Mix	L	4	67	15	2	30	1000
Jeans	L	4	72	20	2	30	1000
Shirts	L	4	70	10	3	40	1000
Down	L	2	72	25	2	40	600
Synthetic	L	4	62	10	2	30	1000
Curtain	L	4	58	5	2	30	800
Outdoor Care	L	4	55	15	2	30	800
Silk	U	1	41	10	2	30	600
Sports Wear	L	4	25	5	1	20	800
Wool	L	2	46	15	1	20	800
Color Wear	U	3	59	25	2	OFF	600
Quick Wash	U/L	1/3	15	3	1	OFF	1000
Delicates	L	3	41	10	2	30	600
Rinse & Spin	U/L	3/6	26	/	2	/	1000
Spin	U/L	3/6	7	/	/	/	1000
Tub Clean	U/L	--	70/90	/	/	/	/

¹⁾ Due to multiple distribution, inlet waiting, spin waiting and drainage waiting, the display time does not match with the actual runtime.

Consumption

The indicated consumption values may accordingly differ to local conditions.

Programme	Temperature in °C	Load in kg upper/lower drum	Energy	Water	Washing time in h:min upper/lower drum	Spin drying performance in %
Daily Wash	40	4(upper)	★★★	★★★★	4:04(upper)	65
Cotton	40	8(lower)	★★★★	★★★★★	3:54(lower)	55

- 1.Upper Drum Energy Label Program Settings:Daily Wash,Wash 40 min,Rinse 2 times, Temp. 40°C,Speed 1200 rpm,Additional Intensive.Lower Drum Energy Label Program Settings:Cotton Wash 50 min,Rinse 2 times, Temp. 40°C,Speed 1500 rpm,Additional Intensive.
- 2.Detergent dissolvent method:Dissolve the detergent first and pour the dissolved detergent into the machine immediately,then start the test program.

The actual water temperature may differ from the declared cycle temperature. If the machine is used for commercial purposes the warranty will be void.Do not use for the purposes other than that which the machine is designed for. Follow the instructions given on the label of each garment and wash only machine-washable garments.

Eco-friendly washing



Environmentally responsible use


- ▶ To achieve best use of energy, water, detergent and time you should use the recommended maximum load size.
- ▶ Do not overload (hand width clearance above laundry).
- ▶ For slightly soiled laundry select the Quick Wash programme.
- ▶ Apply exact dosages of each washing agent.
- ▶ Choose the lowest adequate washing temperature - modern detergents are efficiently cleaning below 60°C.
- ▶ Raise default settings only due to heavy staining.
- ▶ Select max. spinning speed if a domestic dryer is used.

Daily use

Quick Guide

1. Open the water tap.
2. Put the power plug in to the electrical socket.
3. Switch the appliance on by touching the power on symbol for 3 sec.
4. Prepare the laundry.
5. Select the washing drum according to the laundry.
6. Load the laundry and close the door.
7. Select the detergent.
8. Add the detergent into the correct compartment.
9. Select the washing programme on the display which suits the degree of soiling and sort of laundry type.
10. Maybe add individual selections and/or a start delay time.
11. Touch ► to start the programme.
12. Take out the laundry after the programme ends. Close the water tap, pull out the power plug.

Operation flowing chart

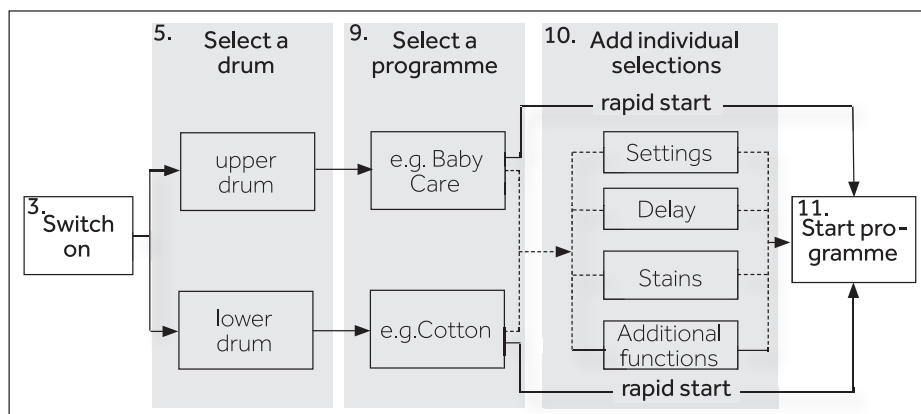


1. Water connection

- ▶ Before connecting, check the cleanliness and clarity of the water inlet.
- ▶ Turn on the tap (fig.1.).



Note:

Before use check for leakage in the joints between the tap and the inlet hose by turning on the tap.

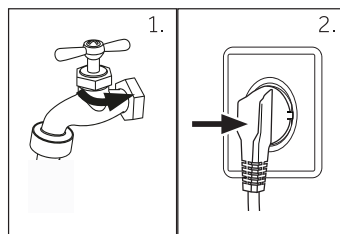


2. Power supply

Connect the washing machine to a power supply (220V to 240V~/50Hz) (fig.2.). Please refer also to section INSTALLATION.


3. Switch on the appliance

Touch the Power- button for 3 seconds to switch on the appliance the display is shining (fig. 3.).

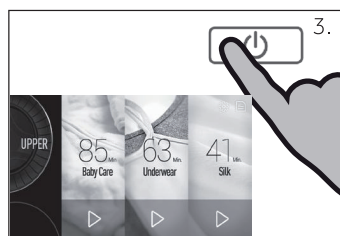

4. Preparing laundry

- ▶ Sort out clothes according to the type of the fabric (cotton, synthetics, wool or silk) and to how dirty they are. Pay attention to the caring label of the clothes (fig.4)
- ▶ Separate white clothes from coloured ones. Wash coloured textiles first by hand to check if the color fade or not.
- ▶ Empty pockets (keys, coins, etc.) and remove harder decorative objects (e.g. brooches).
- ▶ Garments without hems, delicates and finely woven textile such as fine curtains are to be put into a wash bag to care for this delicate laundry (hand or dry cleaning would be better).
- ▶ Close zippers and hooks, make sure the buttons are sewn on tightly.
- ▶ Place small items such as socks, belts, bras, etc. in a wash bag.
- ▶ Unfold large pieces of fabric such as bed sheets, bedspreads etc.
- ▶ Turn clothes inside out.

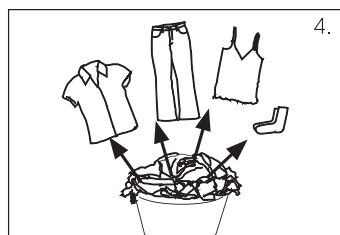

CAUTION!

Non-textile, as well as small, loose or sharp-edged items may cause malfunctions and damage of clothes and appliance.

Daily use

Care chart

Washing					
	Washable up to 95°C normal process		Washable up to 60°C normal process		Washable up to 60°C mild process
	Washable up to 40°C normal process		Washable up to 40°C mild process		Washable up to 40°C very mild process
	Washable up to 30°C normal process		Washable up to 30°C mild process		Washable up to 30°C very mild process
	Wash by hand max. 40°C		Do not wash		
Bleaching					
	Any bleaching allowed		Only oxygen/ non -chlorine		Do not bleach
Drying					
	Tumble drying possible normal temperature		Tumble drying possible lower temperature	 Do not tumble dry	
	Line drying		Flat drying		
Ironing					
	Iron at a maximum temperature up to 200 °C		Iron at a medial temperature up to 150°C	 Iron at a low temperature up to 110 °C; without steam (steam ironing may cause irreversible damage)	
	Do not iron				
Professional Textile Care					
	Dry cleaning in tetra-chloroethene		Dry cleaning in hydrocarbons	 Do not dry clean	
	Professional wet clean		Do not professional wet clean		

5. Selecting a drum



1. Touch or slide up and down the left side of the screen to switch between the drums (fig.5.3). Choose the drum according to desired programme and weight of laundry:

Upper drum: max. 4 kg

Lower drum: max. 8 kg.

Before starting a programme the drum can be chosen by touching the marked area in fig. 5.2.

2. After starting a programme follow the instructions on the screen (fig.5.3) and touch to choose programme for the other drum.

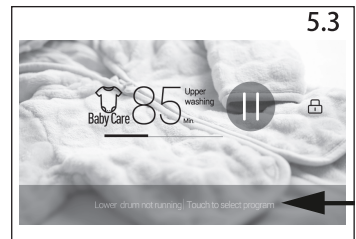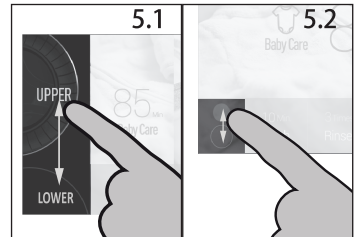

6. Loading the appliance

- Load the laundry piece by piece.
- Don't overload. Check if you can put a hand upright on top of load.
- Close the door carefully. Make sure that no pieces of laundry are pinched.

7. Selecting detergent

- Washing efficiency and performance is determined by used detergent quality.
- Use only machine wash approved detergent.
- If needed use specific detergents, e.g. for synthetic and woolen fabric.
- Mind always detergent manufacturer recommendations.
- Do not use dry cleaning agents such as trichloroethylene and similar products.

Daily use

Choose the best detergent

Programme	Kind of detergent				
	Universal	Colour	Delicate	Special	Softener
Upper drum					
Baby Care	L/P	L/P	-	-	o
Underwear	L/P	L/P	-	-	o
Silk	-	-	-	L	o
Daily Wash	L/P	L/P	-	-	o
Allergy Care	L/P	L/P	-	-	o
Color Wear	-	L/P	-	-	o
Kids' Wear	L/P	L/P	-	-	o
Quick Wash	-	-	L	-	o
Towels	L/P	L/P	-	-	o
Combo	L/P	L/P	-	-	o
Lower drum					
Cotton	L/P	L/P	-	-	o
Synthetic	L/P	L/P	L	-	o
Wool	-	-	-	L	o
Mix	L/P	L/P	-	L	o
Jeans	L/P	L/P	L	-	o
Sports Wear	-	-	-	L	o
Shirts	L/P	L/P	-	-	o
Curtains	-	-	-	L	o
Down	-	-	-	L	o
Outdoor Care	-	-	-	L	o
Bedding	L/P	L/P	-	-	o
Quick Wash	-	-	L	-	o
Sanitary	L/P	L/P	-	-	o
Delicates	-	-	L	L	o
Bulky	L/P	L/P	-	-	o
Combo	L/P	L/P	-	-	o


L = gel-/liquid detergent P = powder detergent O = optional - = no

We recommend by using:

- ▶ Laundry powder: 20°C to 90°C (best use:: 40-60°C)
- ▶ Colour detergent: 20°C to 60°C (best use: 30-60°C)
- ▶ Wool/delicate detergent: 20°C to 30°C (= best use)

8. Adding detergent

1. Open the detergent drawer cover (fig.8).
2. Put the required chemicals into corresponding compartments.
 - 1: Lower drum; softener, Conditioning agent etc.
 - 2: Lower drum; detergent for programme
 - 3: Upper drum; softener, Conditioning agent etc.
 - 4: Upper drum; detergent for programme
3. Close the cover.

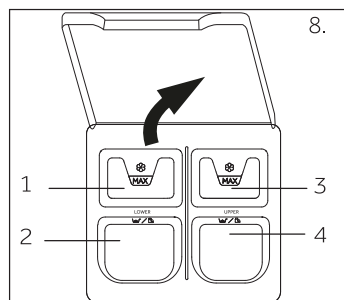


Note:

- ▶ Add the detergent into the correct compartment depending on selected drum.
- ▶ Do not overuse detergent or softener.
- ▶ Please follow the instruction on the detergent and softener package.
- ▶ Always fill the detergent just before the beginning of the wash cycle.
- ▶ Concentrated liquid detergent should be diluted before adding.
- ▶ The best use of liquid detergent is by using a dosing ball, which is given with the laundry into the washing machine.
- ▶ Do not use liquid detergent if "Delay" is selected.
- ▶ Carefully choose the programme settings according to the care symbols on all laundry labels and according to the programme table.
- ▶ After washing circles there might be small amount of water gathered in the drawers. This is normal water supply or condensation during the washing circles.

9. Selecting a programme

The screen will show the available programmes after the drum has been selected. Three programmes will be shown on the page, slide to right to check all other available programmes drum (fig.9):

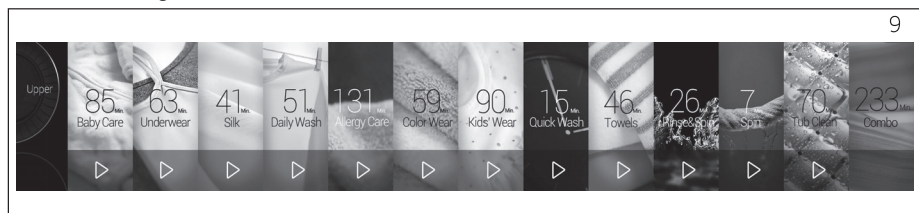

Touch ▶ of desired programme to get a rapid start with using default settings or touch above this symbol to choose individual settings.

Daily use

10.



10. Add individual selections

Once the programme has been selected, it will be displayed in full screen (fig. 10). The function buttons (1) enables additional options in the selected programme before programme start. The chosen value shines in orange. Touch button (2) in order to see more functions. By switching off the appliance or setting a new programme, all options are disabled.



Note:

- ▶ To get best results in each programme Haier has well defined specific default settings. If there is no special requirement default settings are recommended.
- ▶ Not every function is available for each programme. It depends on the selected programme.
- ▶ Some additional functions can not be selected at the same time.

Following functions are available:

Screen 1: Settings

Function	Meaning	Function	Meaning
Wash	Washing duration can be extend or reduce according to the dirtiness of laundry. (Information in minutes).	Temp.	Change of washing temperature. Adjust the temperature according to the degree of pollution: Heavy dirty: 60-90 °C normal dirty: 30-60 °C less dirty: cold (OFF)-30 °C
Rinse	Additional rinsing cycles for people with sensitive skin.	Speed	Change of spin speed. For very delicate fabrics reduce speed.


Screen 2: Time delay, special stains and additional functions

Function	Meaning	Function	Meaning
Delay	Start of wash cycle will be delayed.	Stains	Special feature for stains of: • Blood • Grass • Wine • Juice • Soil • Milk
Additional			
Water Plus	Raise water level and volume during washing and rinsing.	Intensive	Increase washing time for especially dirty laundry.
Night wash	To wash at night.	Soak wash	Increase soaking time for especially dirty laundry.
Eco wash	Save time and energy for laundry with less dirt.	Easy Ironing	Loose the laundry automatically after washing circles.

10.1 Selecting a time delay – End time delay

Use this function to start the programme with a delay.

1. Set a programme and select required functions.
2. Slide or touch within the option cube to set up time delay in steps of 1 hour from OFF-24h (fig.10.1)
3. Touch signal ► to start the programme; time countdown will begin.


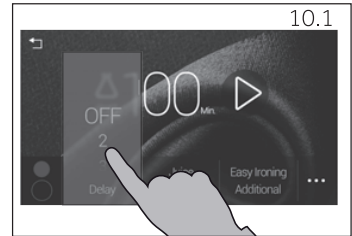


i Note:

- End time must always be longer than programme cycle time. Otherwise operation will start immediately, although chosen end time could not be reached.
- If using liquid detergent, it is not recommended to activate the end time delay.


11. Start wash programme

Touch ► on the display to start programme (fig. 11.1 screen after choosing individual settings; fig.11.2: screen using default settings= rapid-start). Appliance operates according to present settings.

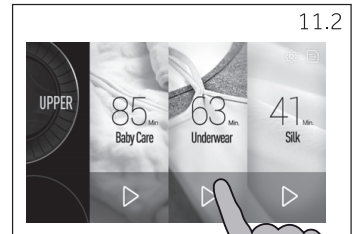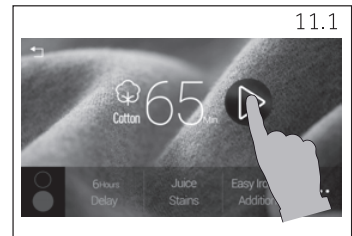

Daily use

11.1.1.

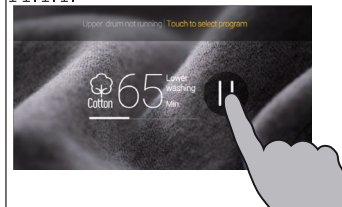

11.1 Interrupt wash programme

To interrupt a running programme touch pause symbol  on the display (fig. 11.1.1.). Press  to resume operation.

11.2 Cancel wash programme

To cancel a running programme and all its individual settings:

1. Touch pause symbol .
2. Touch the return symbol  and go back to the parameter setting page.
3. Touch the return symbol  again to re-select programme.
4. Confirm the message to re-select the programme.
5. Select a new programme and start.

12. After washing

1. At programme cycle end the appliance switches off automatically.
2. Remove laundry as soon as possible to go easy on it and to prevent more wrinkling.
3. Turn off the water supply.
4. Unplug the power cord.
5. Open the doors to prevent formation of moisture and odours. Let it open while not used.

Care and cleaning

Inspect and clean your appliance at regular intervals.



WARNING!

Before maintenance, deactivate the appliance and disconnect the mains plug from the mains socket.

Cleaning the machine


- ▶ Unplug the machine during cleaning and maintenance.
- ▶ Use a soft cloth with soap liquid to clean the machine case and rubber components.
- ▶ Do not use organic chemicals or corrosive solvents.
- ▶ If necessary, lime residues can be removed with standard machine cleaner.




Water inlet valve and inlet valve filter

To prevent blockage of water supply by solid substances like lime clean regularly the inlet valve filter.

- ▶ Unplug the power cord and turn off the water supply.
- ▶ Unscrew the water inlet hose on the tap.
- ▶ Flush the filter with water and a brush.
- ▶ Insert the filter and install the inlet hose.

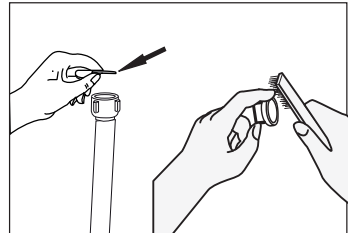


Care and cleaning

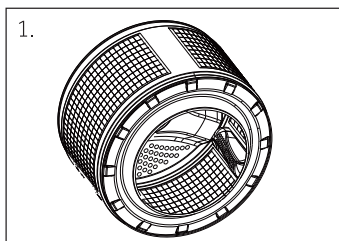

Cleaning the drums

- ▶ Remove accidentally washed metal parts such as pins, coins, etc. from the drum (fig.1) because they cause rust stains and damage.
- ▶ Use a non-chloride cleaner for removing rust stains. Observe the warning hints of the cleaning agent manufacturer.
- ▶ Do not use any hard objects or steel wool for cleaning.

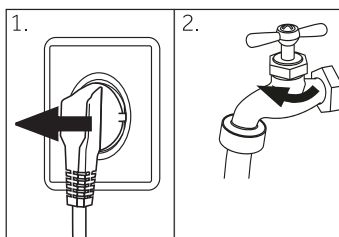

Long periods of disuse

If the appliance is left idle for a longer period:


1. Pull out the electrical plug (fig. 1).
2. Turn off water supply (fig. 2).
3. Open the doors to prevent formation of moisture and odours. Let doors open while not used.

Before next usage check carefully power cord, water inlet and drain hose. Make sure everything is properly installed and without leakage.



Note:

The new hose-sets supplied with the appliance are to be used and that old hose-sets should not be reused.

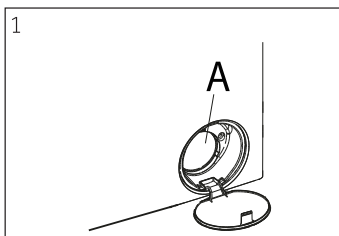


Pump filter

Clean the front filter A (fig.1) according to the display reminding.

Check the pump filter for instance if the appliance:

- ▶ doesn't drain the water.
- ▶ doesn't spin.
- ▶ cause unusual noise while running.

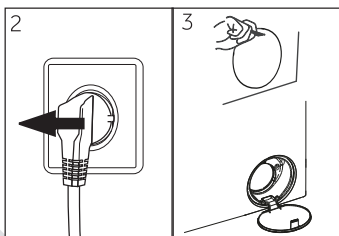

1. Start spinning programme and drain out the water.
2. After programme end turn appliance off and unplug the appliance (fig. 2).
3. Open service flap of filter A by using a coin or a screwdriver (fig. 3).

Care and cleaning





4. Provide a flat container (1) to catch leach water (fig. 4). There could be bigger amounts!
5. Pull the drainhose (2) out and hold its end above the container.



WARNING!

Scalding Risk! Water in the pump filter can be very hot! Before any action please ensure water has cooled down.

6. Take the sealing plug (3) out of the drainhose.
7. After complete drainage, close the drainhose and slide it into the appliance and fix it with the clamp (pos. 5 in fig. 5).
8. Unscrew and remove counter-clockwise the pump filter (4).
9. Remove contaminants and dirt (fig.6).
10. Clean carefully pump filter, e.g. using running water (fig.7).
11. Refix it thoroughly (fig.8).
12. Close service flap of filter A.

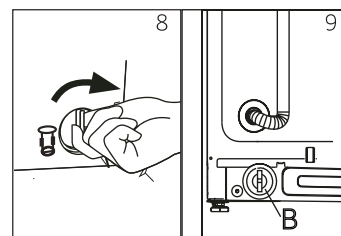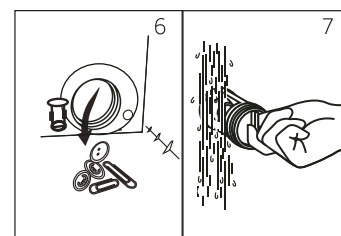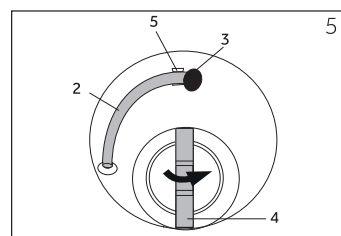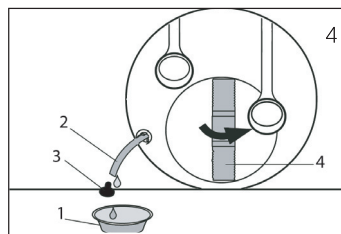

Note:

There is an other filter B at the back of bottom base (fig.9). Normally it is no need to clean this filter B. Please check the pump filter B if error code **E1** is displayed.



CAUTION!

- ▶ Pump filter sealing has to be clean and unhurt. If the lid is not full tightened, water can escape.
- ▶ The filter must be in place, or it may lead to leakage.

Troubleshooting

Troubleshooting


Many occurring problems could be solved by yourself without technical expertise. In case of a problem please check all shown possibilities and follow below instructions before you contact an after sales service. See "CUSTOMER SERVICE".



WARNING!

- ▶ Before maintenance, deactivate the appliance and disconnect the mains plug from the mains socket.
- ▶ Electrical equipment should be serviced only by qualified electrical experts, because improper repairs can cause considerable consequential damages.
- ▶ A damaged power cable should only be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Information codes

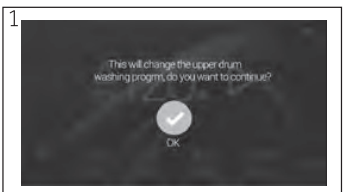

- ▶ Some displayed messages only refer to the washing cycle (fig.1). No measures must be performed.

Troubleshooting with display code



Note:

- ▶ If error information appears please press power button to get rid of it. If it keeps appearing, pull out power plug and contact customer service.
- ▶ In case you are asked to contact the customer service: Note troubleshooting message and refer to "CUSTOMER SERVICE".

Tip code	Cause	Solution
E1	The washing machine cannot empty the water.	Please check filter is clean, and the drain valve and drain pipe are not blocked.
E2	• The door is not locked. • The door has not unlocked.	• Please open then close the door and press the OK key to start the selected program. • Please switch off the washing machine, and contact Aftersales service.
E4	Water did not reach the correct level.	Please check the water supply is available and turned on, or if there is low water pressure.
E8	The water level is too high.	If this occurs frequently, please switch off the washing machine, and contact Aftersales service.

Troubleshooting

Tip code	Cause	Solution
F3	The water did not reach the correct temperature.	Please switch off the washing machine, and contact Aftersales service.
F4	Heating system fault.	Please switch off the washing machine, and contact Aftersales service.
F7	Motor fault.	Please switch off the washing machine, and contact Aftersales service.
FA	Water level sensor fault.	Please switch off the washing machine, and contact Aftersales service.
FC1	Power PCB communication fault.	Please switch off the water and power to the washing machine, and contact Aftersales service.
FC2	Motor PCB communication fault.	Please switch off the water and power to the washing machine, and contact Aftersales service.
FC5	Display PCB communication fault.	Please switch off the water and power to the washing machine, and contact Aftersales service.
FC6	Drive PCB fault with the same identity code.	Please switch off the water and power to the washing machine, and contact Aftersales service.
Clean	Please clean the filter.150 cycles reminder.	Please clean the drain filter.150 wash cycles reminder.
Clean	Please run the drum self cleaning program.	Please run the drum self cleaning program. 100 wash cycle reminder.
LOCK	The door is locked.	• If you need to open the door, switch off the washing machine, then switch on, select the spin program to empty the water in the drum, and the door will unlock. • The door is locked due to high water level in the drum.
Unb	Unbalanced load.	• Please check the washing machine is stable, if not adjust the feet, then select the spin program. • Open the door and re-arrange the laundry evenly, close the door and select the spin program.

Troubleshooting

Troubleshooting without display code

Problem	Cause	Solution
Washing machine fails to operate	• Programme is not yet started. • Door is not properly closed. • Machine has not been switched on. • Power failure. • Child lock is activated. • Time delay is activated? • Pause button is pressed?	• Check programme and start it. • Close the door properly. • Switch the machine on. • Check power supply. • Deactivate child lock. • Deactivate time delay function. • Deactivate pause modus.
Control panel is out of function	• Child Lock is activated?	• Deactivate child lock.
Washing machine will not be filled with water	• No water. • Inlet hose is kinked. • Inlet hose filter is blocked. • Water pressure is too low. • Door is not properly closed. • Water supply failure. • Time delay is activated? • Start button in not touched?	• Check water tap. • Check inlet hose. • Unblock inlet hose filter. • Check water pressure. • Close the door properly. • Ensure the water supply. • Deactivate time delay function. • Touch start button.
Machine is draining while being filled	• Height of drain hose is below 80 cm. • Drain hose end could reach into the water.	• Make sure that drain hose is properly installed. • Make sure the drain hose is not in water.
Drainage failure	• Drain hose is blocked. • Pump filter is blocked. • Drain hose end is higher than 100 cm above floor level.	• Unblock drain hose. • Clean pump filter. • Make sure that drain hose is properly installed.
Strong vibration while spinning	• Not all transportation bolts have been removed. • Appliance has no solid position. • Machine load is not correct.	• Remove all transportation bolts. • Ensure solid ground and a levelled position. • Check load weight and balance.
Operation stops before completing wash cycle.	• Water or electric failure. • Pause button is pressed?	• Check power and water supply. • Deactivate pause modus.
Operation stops before completing wash cycle	• Appliance displays error information. • Problem due to load pattern. • Programme performs soaking cycle?	• Consider display information. • Reduce or adjust load. • Cancel programme and restart.
Excessive foam flots drum and/or detergent drawer	• Detergent is not a appropriate. • Excessive use of detergent.	• Check detergent recommendations. • Reduce amount of detergent.
Automatic adjustment of washing time	• Washing programme duration will be adjusted.	• This is normal and doesn't affect functionality.
Spinning fails	• Unbalance of laundry.	• Check machine load and laundry and run a spinning programme again.

Troubleshooting


Problem	Cause	Solution
Strange sound	- Appliance has no solid position. - Foreign matters like coins or zippers hit the drum.	- Ensure solid ground and a levelled position. - Ensure pockets are emptied of keys, coins etc.
Parts of control panel has higher temperature.	Electronic elements has tepid effect.	It's normal.
Unsatisfactory washing result.	- Degree of pollution does not agree with selected programme. Detergent quantity was not sufficient - Maximum load has been exceeded. - Laundry was unevenly distributed in the drum.	- Select an other programme - Choose the detergent acc. to the degree of pollution and acc. to manufacturer specifications. - Reduce loading. - Loose the laundry.
Washing powder residues are on the laundry.	Insoluble particles of detergent can remain as white spots on the laundry.	- Perform extra rinse. - Try to brush the points from the dry laundry - Choose an other detergent.
Laundry has grey patches	Caused by fast such as oils, cream or ointments.	Pretreat the laundry with a special cleaner
Laundry not drained out after spinning	- Different kinds of laundry might have different spin effects. - Eccentric protection is in function because load is too little	- This is normal. - Increase loading.

In case of power failure /door opening in emergency.


The current programme and its setting will be saved. When power supply is restored operation will be resumed. To cancel it, touch "Start/Pause button" and then "power button" for about 3 sec.

If a power failure cuts an operating wash programme door opening is mechanically blocked. To get out any laundry water level should not be seen in the glassy porthole of the doors. - Danger of burns! Water level has to be lowered as described in "Care and Cleaning-Pump filter".

Pull the corresponding emergency ring (fig. 1) behind the service flap of filter A to open the door (A: upper drum door, B: lower drum door) until door is unlocked by a gentle click. Afterwards refix all parts.

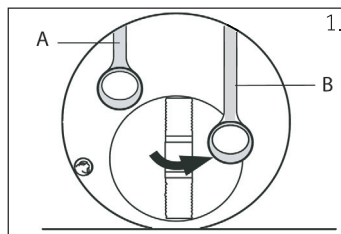

Installation

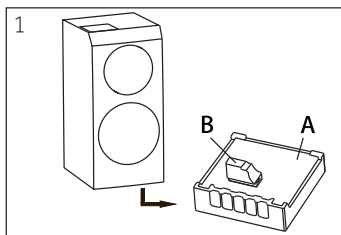


Preparation

- Take the appliance out of the packing.
- Remove all packing material including polystyrene base (A) with part (B)(fig.1) and the fixation material inside the housing, keep them out of childrens reach. While opening the package, water drops may be seen on plastic bag and porthole. This normal phenomenon results from water tests in the factory.



Note:


Keep all packaging materials out of childrens reach and dispose them in an environmentally friendly manner.

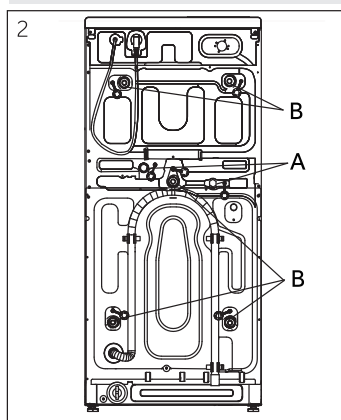

Dismantle the transportation bolts

The transportation bolts are designed for clamping anti-vibration components inside the appliance during transportation to prevent inner damage.

1. Remove the 2 transportation bolts (A) on the rear side and take out rubber spacers (C) from inner side of the machine. (fig.2 and 3)
2. Remove the 5 packaging screws (B) and take out plastic spacers (D) from inner side of the appliance (fig.4).
3. Fill left holes with blanking plugs (E) (fig.5).

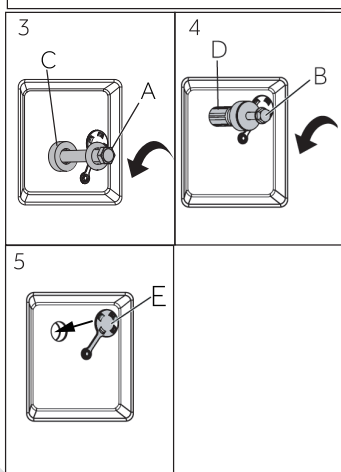

Note:

Keep the transportation bolts in a safe place for later use. Whenever the appliance is to be moved at first reinstall the bolts.

Moving the appliance


If the machine is to be moved to a distant location, replace the transportation bolts removed before installation to prevent damage:

1. Remove the blanking plugs.
2. Insert the plastic spacers and the transportation bolts as well as the packaging screws.
3. Tighten the bolts with a spanner.

Adjusting the feet

Adjust all feet to achieve a complete level position with enclosed spanner. This will minimize vibrations and thus noise during use. It will also reduce wear and tear. We recommend to use a spirit level for adjustment. Floor should be as stable and flat as possible.

1. Loose the locking screw caps (1) with enclosed spanner (fig.1).
2. Get the appliance to horizontal level through adjusting the feet (2).
3. Use spanner to tighten the screw caps (1) to direction "tight".

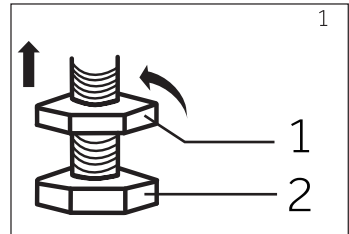

Drain water connection



WARNING!

- Use only the supplied hose set for the connection.
- Never reuse old hose sets!
- Only connect to cold water supply.
- Before connection, check whether the water is clean and clear.

Following connections are possible:

1. Drain hose to sink



- Hang the drain hose with the U-support over the edge of a sink with adequate size (fig.1).
- Protect the U-support sufficiently against slipping.

2. Drain hose to waste water connection

- The internal diameter of the stand pipe with vent-hole must be minimum 40 mm.
- Put the drain hose for approx. 80 mm in the wastewater pipe (fig.2).
- Attach the U-support and secure it sufficiently.

3. Drain hose to sink connection


- A spigot connection is usually closed by a pad (A). That must be removed to prevent any disfunction (fig.3).
- Secure the drain hose with a clamp.

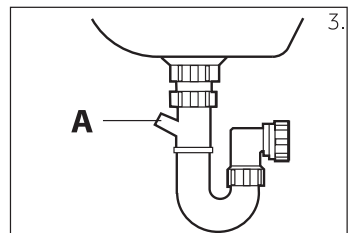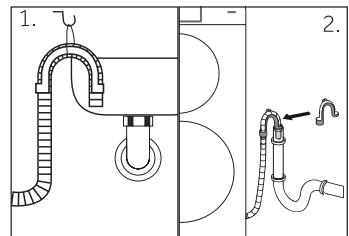

Installation

CAUTION!


- ▶ The drain hose should not be submerged in water and should be securely fixed and leak-free. If the drain hose is placed on the ground or if the pipe is at a height of less than 80 cm, the washing machine will continuously drain while being filled (self-siphoning).
- ▶ Drain hose is not to be extended. If necessary contact after sales service.

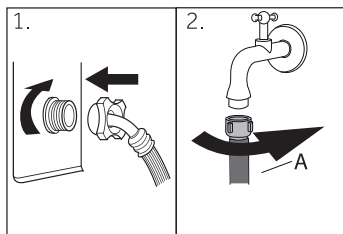

Fresh water connection

Make sure that the gaskets are inserted.

1. Connect the water inlet hose with the angled end to the appliance (fig.1). Tighten the screw joint by hand.
2. The other end connect to a water tap with a 3/4" thread(fig.2).

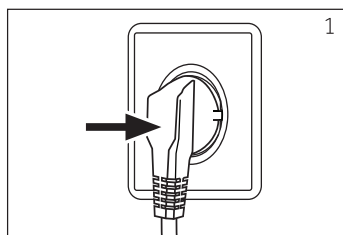

Electrical Connection

Before each connection check if:

- ▶ power supply, socket and fusing are appropriate to the rating plate.
- ▶ the power socket is earthed and no multi-plug or extension.
- ▶ the power plug and socket are strictly according.

Put the plug into the socket(fig.1) .

WARNING!

- ▶ Ensure always that all connections (power supply, drain and fresh water hose) are firm, dry and leak free!
- ▶ Take care these parts are never to be crushed, kinked, or twisted.
- ▶ If the supply cord is damaged, it must be replaced by the service agent (see warranty card) in order to avoid a hazard.

Note:

After each installation or longer down time run at first programme "Tub Clean" with no load and added detergent to remove possibly corruptive residues.

Technical data

Basic technical information regarding the appliance:

HWX8040DW1:

Dimension (HxWxD in mm)	1280x600x600
Voltage / current	220-240 V/50 Hz/10 A
Max. power (W)	2100
Water pressure (MPa)	0.03 - 1.0
Net weight (kg)	116
Nominal load (kg)	4(Upper drum)+8(Lower drum)

Customer service

We recommend our Haier Customer Service and the use of original spare parts.
If you have a problem with your appliance, please first check section "TROUBLESHOOTING".

If you cannot find a solution there, please contact

- ▶ your local dealer or
- ▶ the Service & Support area at www.haier.com where you can find telephone numbers and FAQs and where you can activate the service claim.

To contract our Service, ensure that you have the following data available.
The information can be found on the rating plate.

Model _____ Serial No. _____

Also check the Warranty Card supplied with the product in case of warranty.





Haier

0020507767G